
USHIBAYxxxWIUAOK Installation Instructions

Check whether it concerns an AC(Alternating Current)based or DC(Direct Current) based system

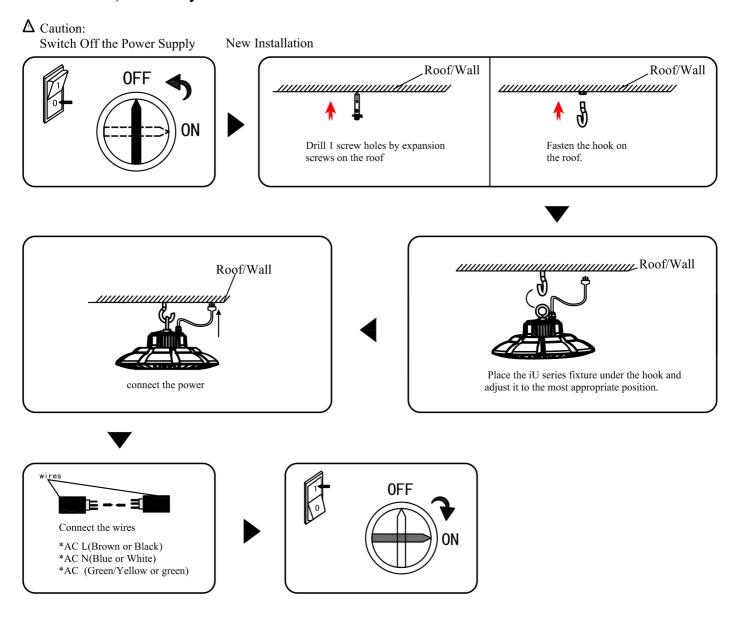

- 1. To protect the surface of the fixture from scratch, please handle the package with care during the transportation and storage. Do not place heavy item above the package;
- 2. Do not let the product surface friction with other hard objects or fall on the floor;
- 3. Make sure the fixture is securely mounted. The connection of all the wires must have insulation protection;
- 4. The appropriate waterproof measurements are requried when connecting the driver externally;
- 5. The operating voltage range of this product is between 85VAC to 265VAC (in 50/60Hz). Please do not use the luminaire out of this range.