





2. The Power Supply Cord should extend to apprximately the same location as the Eye hook. The customer must also provide a junction box in order to connect the LED Driver Input to the AC Power Supply cable. Follow the Wiring Diagram.

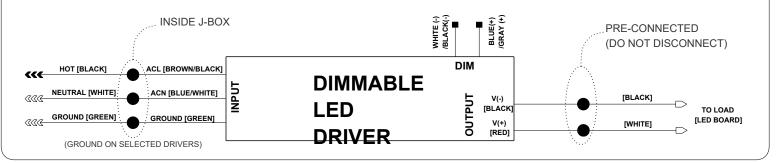


3. All wiring connections must be made inside a Junction Box. Make sure to choose the correct junction box for the desired application. Some junction boxes are made for outdoor applications and others are made for indoor applications.

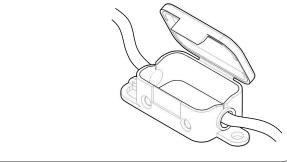

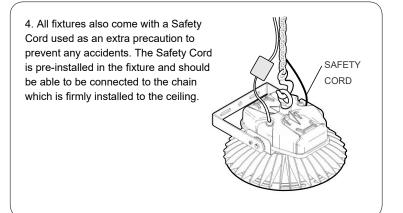

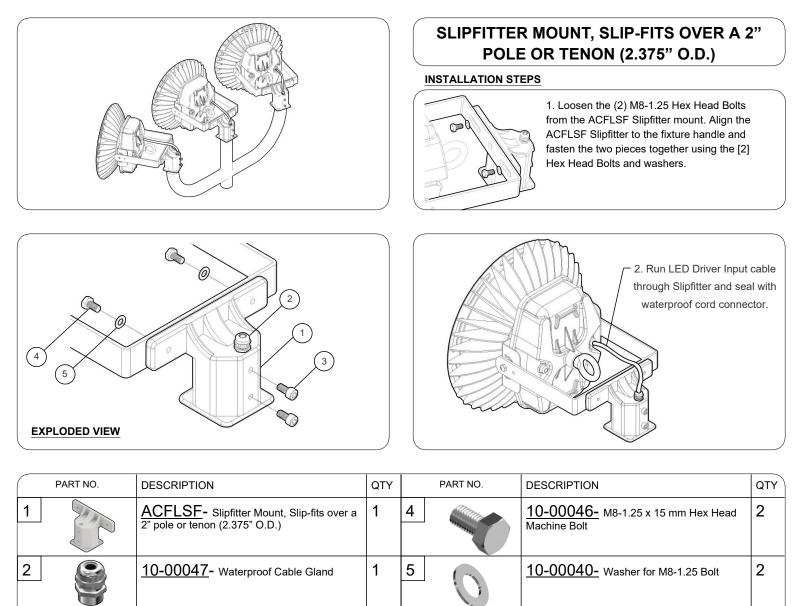

2

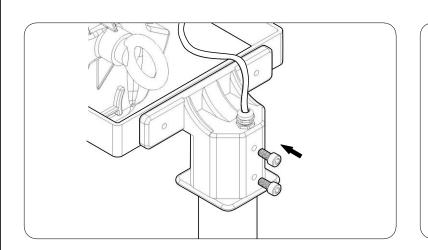


Head Machine Bolt

10-00028- M8-1.25 x 16 mm Socket

3

3. The hole on top of the Slipfitter is used to mount a waterproof cable gland. This is used to get the LED Driver Input cable from the luminaire into the slipfitter.

4. The Slipfitter should be mounted onto a hollow round 2" part with AC Power cords running inside of it. Make sure all powers are off. Follow the wiring diagram provided in order to install the luminaire to the AC Power Supply.

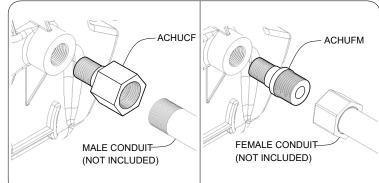

#### INSTALLATION STEPS

1. Using a 5mm Allen wrench,

Socket Head Screws from the

back of the fixture. Remove the back housing from the light fixture in order to have access to the LED Driver cables.

Remove the (6) M6-1.0 x 14 mm


# 


PART NO.	IMAGE	DESCRIPTION	QTY
ACHUCF		Pendant mount adaptor for NPT3/4" conduit, Female	*1
ACHUFM		Pendant mount adaptor for NPT3/4" conduit, Male	*1


**PENDANT MOUNT ADAPTOR FOR NPT 3/4"** 

\*This Installation Sheet applies to either the ACHUCF OR the ACHUCM. Not Both

2. When the back housing is removed, the electrician will be able to see the LED Driver connected to the LED Board. This cable to be left alone. There should also be an Input Cable connected to the LED DRIVER connected with a Splicing Connector. Unclip the wires of the LED Driver from the Splicing Connector.

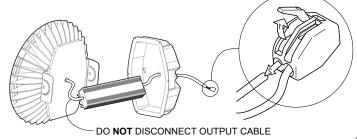

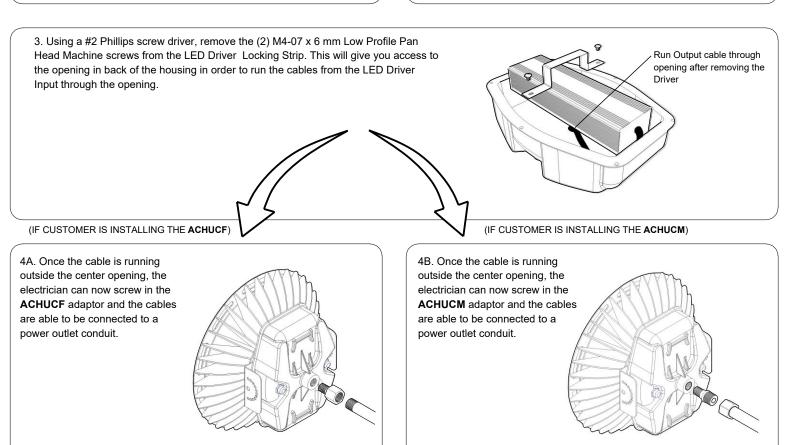

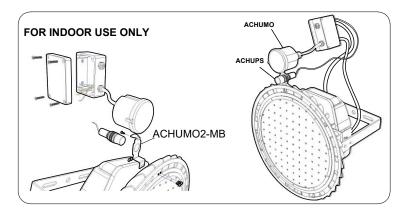


 Remove the two [2] #4-40 PHMS from the ACHUMO-MB bracket of the ACHUMO and remove the small phillips screw from underneath the sensor in order to replace the ACHUMO bracket with the ACHUMO2-MB. Using a Phillips screw driver (preferable with a magnetic tip), Fasten the bracket onto the luminaire and use the hexnuts provided to lock it in place.

 Remove the ACHUPS sensor from the ACHUPS-MB, and install the sensor to the ACHUMO2-MB. Make sure the orientation of the sensor is the same as the day harvesting detector.

3) Use the Wire Diagram provided for the required connections. Make sure all wiring connections are made inside the J-Box provided and are properly sealed by an authorized electrician.

4) Refer to the Individual installation sheets for the ACHUMO and the ACHUPS for adjusting the settings on the Microwave sensor and the Daylight Harvesting Detector.

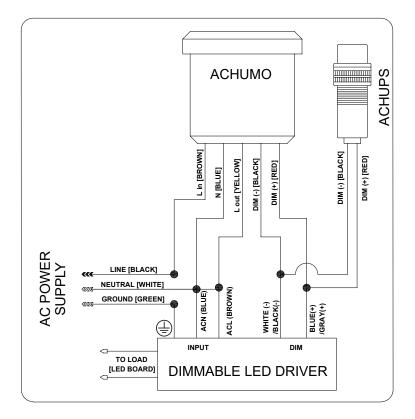

## MICROWAVE OCCUPANCY DETECTION & DAYLIGHT HARVESTING SENSOR

PART NO.	IMAGE	DESCRIPTION	QTY
ACHUPS		Photocell/Daylight harvesting Sensor,1-10Vdc Dim down/up according to ambient brightness level, target light level adjustable. Ip20 rated.	1
ACHUMO	S	Microwave occupancy sensor with J-Box	1
ACHUMO2-MB	En l	Mounting Bracket for the ACHUMO Microwave Sensor and ACHUPS Daylight Harvesting Sensor	1
10-00033		#4-40 Pan Head Machine Screw	2
10-00033		#4-40 Hex Nut	2





**CAUTION:** PLEASE FOLLOW THIS INSTRUCTION MANUAL CAREFULLY TO PREVENT ANY INJURIES OR COMPLICATIONS THAT MAY ARISE.

WARNING: Before installing or maintaining the luminaire, make sure all powers are TURNED OFF. Verify that the supply voltage is correct by comparing it with the label information on all fixtures. Make all connections in accordance with the NEC requirements, and make sure all luminaries are properly secured to prevent any wire complications. This luminaire is not to exceed the maximum ambient temperature rating noted on the specification sheet.


When ACHUMO microwave sensor works together with the ACHUPS daylight harvesting sensor, the lighting fixture will dim the light in response to the available daylight in the area when the area is being occupied.

When the customer orders the ACHUMO and the ACHUPS, a special mounting bracket will also be included (ACHUMO2-MB). This mounting bracket is specifically made to be able to mount both the sensor and occupancy detector simultaneously. Each luminaire already comes with two holes made specifically for this bracket.

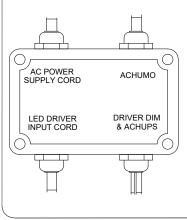

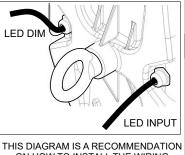

HIS DIAGRAM IS A RECOMMENDATION ON HOW TO INSTALL THE WIRING INSIDE THE JUNCTION BOX. APPLY WATERPROOF SEALANT AFTER ALL WIRING IS COMPLETE.

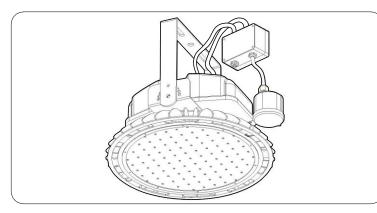

## INSTALLATION STEPS

1) Remove the two [2] #4-40 PHMS from the

2) Refer to the wiring diagram provided to

hexnuts provided to lock it in place.

by an authorized electrician.

area

mounting bracket. Using a Phillips screw driver,

fasten the bracket onto the luminaire and use the


connect the ACHUMO to the Dimmable LED Driver

Try to aim the sensor toward the desired detectable

3) Make sure all wiring connections are made

4) Remove the screw and cap of the sensor and

inside the J-Box provided and are properly sealed

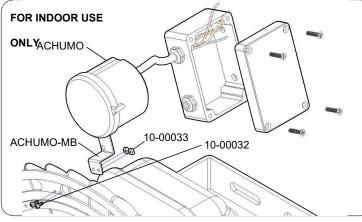

adjust the DIP switches to get the desired settings. Sensor data can be precisely set


for each specific application. Once the program is set, close and fasten the cap.

## MICROWAVE OCCUPANCY DETECTION

CAUTION: PLEASE FOLLOW THIS INSTRUCTION MANUAL CAREFULLY TO PREVENT ANY INJURIES OR COMPLICATIONS THAT MAY ARISE.

WARNING: Before installing or maintaining the luminaire, make sure all powers are TURNED OFF. Verify that the supply voltage is correct by comparing it with the label information on all fixtures. Make all connections in accordance with the NEC requirements, and make sure all luminaries are properly secured to prevent any wire complications. This luminaire is not to exceed the maximum ambient temperature rating noted on the specification sheet.

PART NO.	IMAGE	DESCRIPTION	QTY
ACHUMO	S	Microwave occupancy sensor with J-Box	1
ACHUMO-MB		Mounting Bracket for the ACHUMO occupancy sensor	1
10-00032		#4-40 Pan Head Machine Screw	2
10-00033		#4-40 Hex Nut	2

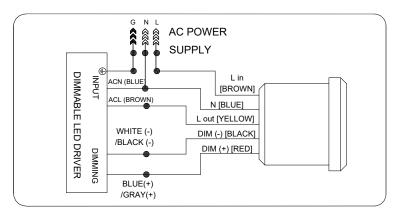

(1) DETECTION AREA 1 ON ON 100% Detection area can be reduced by selecting the combination on the DIP switches to fit П 50% precisely each application 2 3 4 ON ON ON 5s (2-4) HOLD TIME ON ON 30 s П Refer to the time period the lamp remains at ON 90 s ON |||| -100% illumination after IV \_ -ON 3min no motion detected 20min ON ON -VI -30min -8 9 (8-9) STAND-BY DIMMING LEVEL ON ON 50% The low light level you would ON ON 30% like to have after the hold - 20% ON time in the long absence of people IV -10%


		6	1	
	ON	ON	ON	60m+
II	-	ON	ON	60min
	ON	-	ON	30min
IV	-	-	ON	10min
V	ON	ON	-	5 min
VI	-	-	-	5 s
	10	11	12	
Ι	10 ON	11 ON	12 ON	Disable
		11 ON ON		Disable 20 lux
	V	IV - V ON	IV V ON ON	IV ON V ON ON -

#### (5-7) STAND-BY PERIOD Refer to the time period the lamp remains at

100% illumination after no motion detected

#### (10-12) DAYLIGHT SENSOR

The sensor can be set to only allow the lamp to illuminate below a defined ambient brightness threshold. When set to Disable mode, the daylgiht sensor will switch on the lamp when motion is detected regardless of ambient light level. Note that daylight sensor is active only when lamp totally switches off.

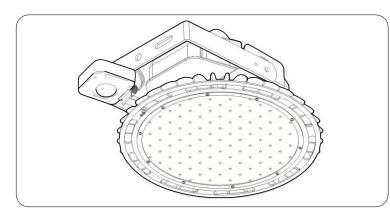


## PIR OCCUPANCY DETECTION


CAUT


CAUTION: PLEASE FOLLOW THIS INSTRUCTION MANUAL CAREFULLY TO PREVENT ANY INJURIES OR COMPLICATIONS THAT MAY ARISE.

WARNING: Before installing or maintaining the luminaire, make sure all powers are TURNED OFF. Verify that the supply voltage is correct by comparing it with the label information on all fixtures. Make all connections in accordance with the NEC requirements, and make sure all luminaries are properly secured to prevent any wire complications. This luminaire is not to exceed the maximum ambient temperature rating noted on the specification sheet.

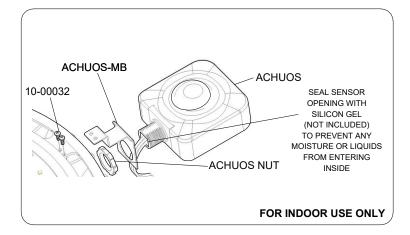

PART NO.	IMAGE	DESCRIPTION	QTY
ACHUOS		Passive infrared occupancy sensor, 120-277v. Adjustable Timer and Sensitivity. Includes the ACHUOS NUT. Indoor Use Only	1
ACHUOS-MB		Mounting Bracket for the ACHUOS Photocell Sensor	1
10-00032		#4-40 Pan Head Machine Screw	2
10-00033		#4-40 Hex Nut	2

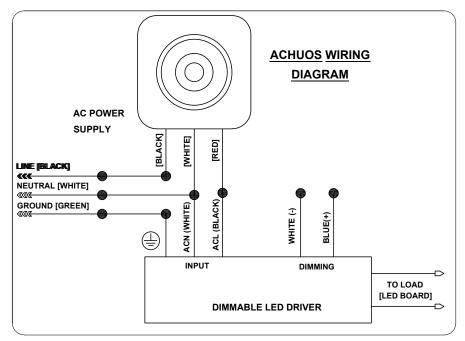

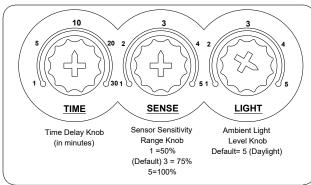

The ACHUOS comes with a black mounting bracket made specifically to be installed with the luminaire. Each luminaire already comes with two holes made specifically for this bracket.

1)Make sure all Powers are OFF.

2) Remove the custom gear-shaped washer in order to remove the mounting bracket from the ACHUOS sensor. Be sure to not misplace any parts since they will all have to be used for later steps.

3) Remove the two [2] #4-40 PHMS from the mounting bracket. Using a Phillips screw driver (preferable with a magnetic tip), Fasten the bracket onto the luminaire and use the hexnuts provided to lock it in place.


4) Once the mounting bracket is fastened onto the fixture, one can now mount the sensor onto the bracket using the same custom gear-shaped washer.

5) Refer to the wiring diagram provided to connect the ACHUOS to the Dimmable LED Driver.


6) Make sure all wiring connections are made inside a J-Box and are properly sealed by an authorized electrician.

7) Seal the sensor opening to prevent any liquids from entering

8) Adjust the [3] knobs to get the desired setting.

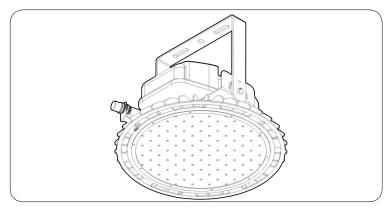

#### INSTALLATION STEPS

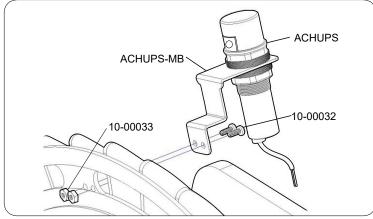


## DAYLIGHT HARVESTING SENSOR

**CAUTION:** PLEASE FOLLOW THIS INSTRUCTION MANUAL CAREFULLY TO PREVENT ANY INJURIES OR COMPLICATIONS THAT MAY ARISE.

**WARNING:** Before installing or maintaining the luminaire, make sure all powers are **TURNED OFF**. Verify that the supply voltage is correct by comparing it with the label information on all fixtures. Make all connections in accordance with the NEC requirements, and make sure all luminaries are properly secured to prevent any wire complications. This luminaire is not to exceed the maximum ambient temperature rating noted on the specification sheet.

PART NO.	IMAGE	DESCRIPTION	QTY
ACHUPS		Photocell/Daylight harvesting Sensor,1-10Vdc Dim down/up according to ambient brightness level, target light level adjustable. Ip20 rated.	1
ACHUPS-MB	0	Mounting Bracket for the ACHUPS Photocell Sensor	1
10-00032		#4-40 Pan Head Machine Screw	2
10-00033		#4-40 Hex Nut	2

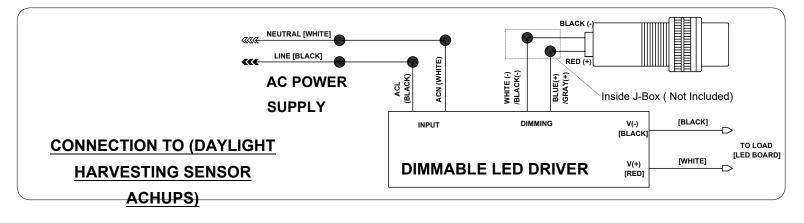

1) Remove the two [2] #4-40 PHMS from the mounting bracket. Using a Phillips screw driver (preferable with a magnetic tip), Fasten the bracket onto the luminaire (all fixtures have two small holes specifically made for the ACHUPS-MB bracket and use the hexnuts provided to lock it in place.

2) Refer to the wiring diagram to connect the ACHUPS to the Dimmable LED Driver.

3) Make sure all wiring connections are made inside a J-Box. Since the Daylight Harvesting Sensor is to only be used indoors. It must be an Indoor J-Box. 4) On the photocell, there is a small adjustable knob with a (+) and (-) sign, this knob is the Potentiometer for adjusting the light level desired. It is recommended for the target light level to be between 40% to 80% of the total lux of luminaires.

